



**MATHEO**



آب مرکبات گیری

MCS 100

■ English


■ فارسی

مشتری گرامی ضمن تشکر از حسن سلیقه و اعتماد شما به برند فلر  
امیدواریم از کار با این دستگاه لذت ببرید.

## اطلاعات فنی

توان: ۱۰۰ وات  
ولتاژ: ۲۲۰-۲۴۰ ولت  
فرکانس: ۵۰ هرتز

## توصیف دستگاه

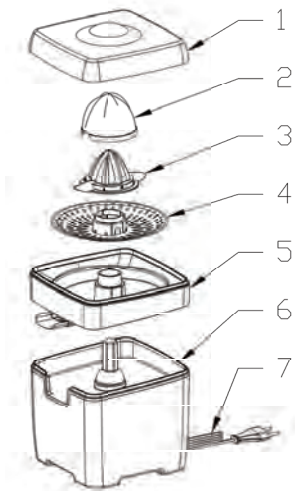

۱. درپوش
۲. سری آبیگری بزرگ
۳. سری آبیگری کوچک
۴. صافی تفاله
۵. مخزن آب میوه
۶. بدنه اصلی
۷. سیم برق

## توصیه های ایمنی

در هنگام استفاده از وسایل برقی، همواره هشدارهای ایمنی را جدی بگیرید تا از خطر آتش سوزی، برق گرفتگی و هرگونه آسیب شخصی پیشگیری نمایید:

۱. برای پیشگیری از خطر برق گرفتگی، دستگاه و یا سیم برق را داخل آب و هر مایع دیگری فرو نبرید؛

۲. نظارت کامل بر کارکرد دستگاه وقتی که کودکان از آن استفاده می کنند ضروریست.

۳. همواره پیش از سرهم کردن اجزا و یا باز کردن اجزا و همچنین زمانی که از دستگاه استفاده نمی کنید سیم برق را از پریز بکشید. همچنین به یاد داشته باشید که هنگام کشیدن سیم، دستتان را از خود دوشاخه بگیرید و از کشیدن سیم و ضربه

ناگهانی به آن خودداری نمایید.

۱۴. از گرفتن قطعه در حال گردش بپرهیزید.

۵. در مواردی از جمله آسیب دیدگی سیم برق و دوشاخه، درست کار نکردن دستگاه در اثر زمین خوردن و یا هر آسیب دیگر به دستگاه، از دستگاه استفاده نکرده و آن را به یکی از مراکز خدمات پس از فروش مجاز تحویل دهید تا موارد فنی و فیزیکی آن را برطرف نمایند.

۶. استفاده از هرگونه لوازم جانبی غیراز قطعات خود دستگاه به هیچ وجه توصیه نمی شود و خطراتی از جمله آتش سوزی و یا برق گرفتگی را در پی خواهد داشت.

۷. از استفاده دستگاه در فضای باز خودداری نمایید؛ از قرار دادن این کالا در نزدیکی اجاق گاز، اجاق برقی و آون خودداری نمایید.

۸. از آویزان ماندن سیم برق از لبه های تیز کانترو و میز و همچنین تماس با سطوح داغ جلوگیری نمایید.

۹. فقط جهت مصرف خانگی (مصارف غیر صنعتی)؛ این محصول جهت استفاده خانگی طراحی شده است.

۱۰. هرگونه تعمیرات و سرویس دستگاه فقط باید در نمایندگی های مجاز خدمات پس از فروش فلر انجام گیرد.

۱۱. برای قطع برق دستگاه، ابتدا صبر نمایید تا موتور متوقف شود سپس سیم را از برق بکشید.

۱۲. دستگاه را در حال کار رها نکنید. برای جدا سازی قطعات، ابتدا صبر نمایید تا موتور متوقف شود. پس از هربار استفاده سیم را از برق بکشید.

#### توصیف عملکرد دستگاه

۱. دستگاه را بر سطحی هموار، محکم و دور از دسترس کودکان قرار دهید.

۲. سیم برق را به پریز بزنید.

۳. مخزن را به صورت صحیح در جای مخصوص قرار دهید.

۴. حال سری آبیگری را نصب نمایید.

۵. یک لیوان زیر خروجی آبمیوه قرار دهید، خروجی را به سمت پایین بدهید تا آب میوه را به سمت لیوان هدایت کند.

۶. برای راه افتادن موتور کفایست میوه نصف شده را بر سری آبیگری قرار دهید و فشار دهید؛ آب میوه به سرعت گرفته می شود.

۷. پس از پایان آبیگری، خروجی را دوباره به سمت بالا برگردانید تا از چکه آب میوه بر سطح میز پیشگیری نمایید.

۸. همیشه دقیقاً پس از استفاده شستشو را انجام دهید (بخش تمیزکاری را مطالعه نمایید).

۹. محفظه جمع آوری سیم و همچنین سری آبگیری در زیر دستگاه می باشد. سری را در محفظه بگذارید و درب آن را ببندید، سیم را نیز در محفظه مخصوص جمع آوری نمایید.

### تمیزکاری دستگاه

۱. سیم برق را از پریز جدا کنید، سری آبگیری، صافی و مخزن را بردارید.
۲. خروجی آب میوه را در حالت اوریب قرار دهید تا تمیزکاری راحت تر انجام شود.
۳. سری آبگیری، صافی و مخزن را بوسیله آب و کف صابون شستشو دهید (این قطعات را در ماشین ظرفشویی قرار ندهید).
۴. بدنه اصلی را نیز بوسیله دستمال نم دار تمیزکاری کنید. از ریختن آب بر بدنه اصلی و یا فرو کردن آن در آب و یا هر مایع دیگری خودداری نمایید.

### بازیافت




در حفظ محیط زیست نقش موثر بازی کنید!  
به آیین نامه های زیست محیطی احترام بگذاریم:  
دستگاه برقی رده خارج خود را به نزدیک ترین مرکز مجاز بازیافت حمل نماییم.

MCS 100

**Dear customer!**  
**Thanks for your worthwhile choice and confidence to Feller brand.**  
**We really hope that you enjoy operating this product.**

### Description of Appliance

- 1.Top lid
- 2.big reamer
- 3.Small reamer
- 4.Sieve
- 5.Bowl
- 6.Body
- 7.Power cord

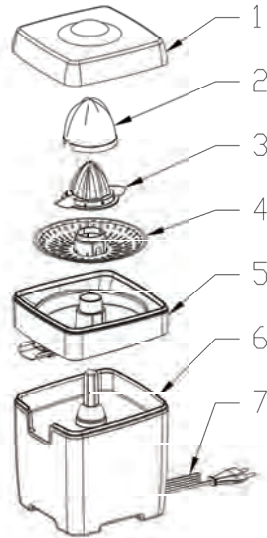

### Safety instructions

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using.

- 1.To protect against electrical shock, do not immerse cord, plug, or citrus juicer in water or other liquid.
- 2.Close supervision is necessary when any appliance is used by or near children.
- 3.Unplug from outlet when no in use, before putting on or taking off parts and before cleaning. Remove plug by gripping plug body and pull out of the outlet. Never yank or twist cord to unplug.
- 4.Avoid contacting moving parts.

5. Do not operate this appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, return the citrus juicer to the retail location where it was purchased for examination, repair, or adjustment.
6. Use this appliance only for its intended use as described by this manual. Do not use accessory attachments without recommending by the Electronics.
7. Do not use outdoors or operate where oxygen is not being administered or in the presence of explosive and/or flammable fumes.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. This appliance is intended for household use ONLY; it is not for commercial or industrial use.
10. Any service of the citrus juicer should be performed by the retail location where it was purchased.
11. To disconnect citrus juicer, wait until motor stops, then remove plug from electrical outlet.
12. Do not operate unattended. Make sure the motor stops completely before disassembling. Unplug after each use.

## **SAVE THESE INSTRUCTIONS**

### Preparing the Citrus Juicer for Use

Always clean cone, sieve, sieve holder and spout before you use the appliance for the first time (see 'Cleaning')

#### **How to use**

1. Place the appliance on a firm, level surface out of the reach of children.
2. Plug in.
3. Put the Sieve holder on place correctly.
4. Put on the sieve.
5. Then insert the cone.
6. Switch the appliance on by pressing the halved fruit firmly onto the cone. The juice will be extracted quietly and quickly.

Put a vessel under spout. Flip the spout down towards the glass.

The instant flow system guides juice directly into vessel.

**6.**After you have finished, flip the spout up to prevent dripping and spilling juice.

**7.**Always clean the appliance immediately after use (see in 'Cleaning')

**8.**Cord and cone storage under Citrus Juicer base, place the cone into the hole then cover it, and exit cord through the opening at the back of the appliance.

### How to Cleaning

**1.**Unplug cord from electrical outlet. Remove the cone, sieve and sieve holder from the appliance.

**2.**Flip the spout down fully in order to clean it properly. The spout cannot be detached from the appliance.

**3.**Clean the cone, sieve and sieve holder by using warm soapy water. Dry all parts. Do not clean these parts in a dishwasher.

**4.**Clean the motor unit by using a moist cloth Never immerse the motor unit in water or rinse it under the tap.

### Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.





**MATHEO**



- English
- فارسی

**Citrus Squeezer**

MCS 100